


Rover 60A Charge Controller

Verify wires are connected correctly



Check voltage on display screen to verify if wiring is correct

- **DO NOT** use the Load + or Load – connection points
- Voltage under the solar panel icon is solar panel voltage
Check solar panel voltage and see if it's **15V or higher**
If voltage is **<15V** then further verification is needed
- Voltage under the battery icon is the battery voltage
Battery voltage should be in the **10-14.7V range**

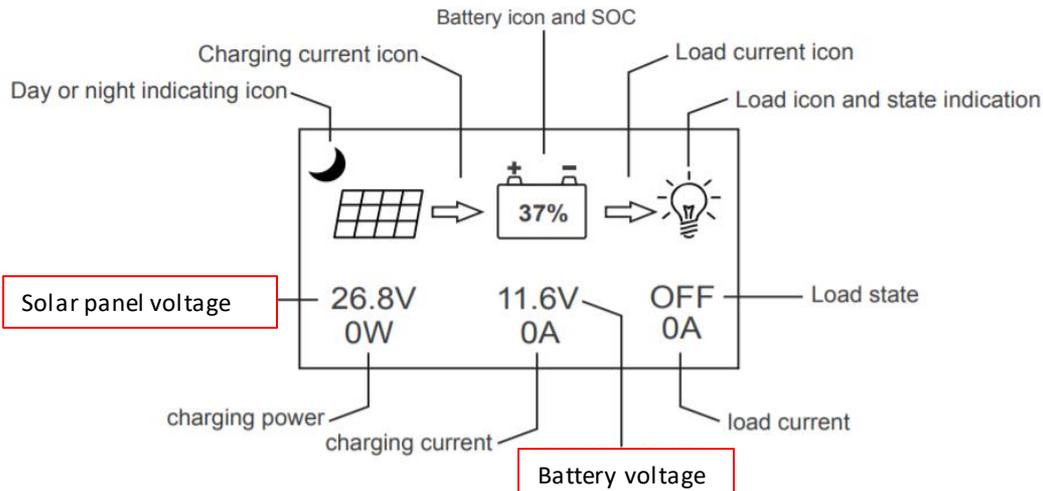

Rover Elite 40A Charge Controller


Verify wires are connected correctly



Check voltage on display screen to verify if wiring is correct

- Voltage under the solar panel icon is solar panel voltage
Check solar panel voltage and see if it's **15V or higher**
If voltage is **<15V** then further verification is needed
- Voltage under the battery icon is the battery voltage
Battery voltage should be in the **10-14.7V range**

Solar Panel Voltage

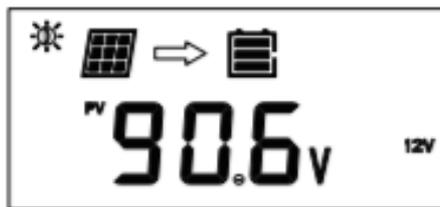

Battery Voltage



Rover 40A Charge Controller

Verify wires are connected correctly



Check voltage on display screen to verify if wiring is correct

- **DO NOT** use the Load + or Load – connection points
- Voltage under the solar panel icon is solar panel voltage
Check solar panel voltage and see if it's **15V or higher**
If voltage is **<15V** then further verification is needed
- Voltage under the battery icon is the battery voltage
Battery voltage should be in the **10-14.7V range**

Battery Voltage Screen



Solar Panel Voltage Screen

