



## TECH TIP: INSIGNIA OVEN PERFORMANCE


(Adjusting the Air Flap Opening for Optimal Performance)



Loosen the two screws as noted above and remove bottom plate inside oven.



Loosen 3 screws as noted above and remove bottom burner tube.

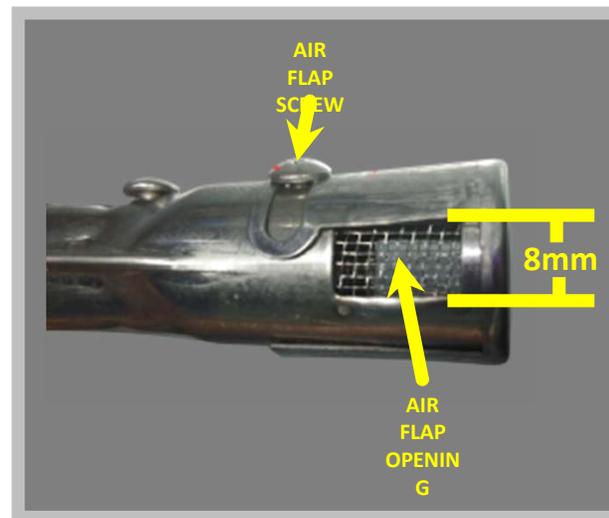

Verify air flap screw is tight and opening is 8mm (5/16"). If not, adjust air flap opening to 8mm and tighten.